



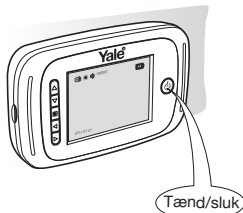


Almindelig brug




Skærmen

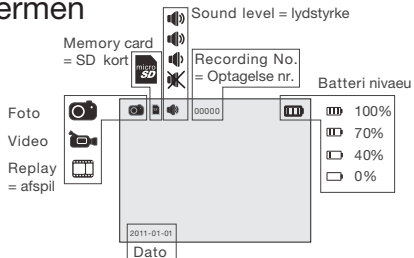


Tag foto

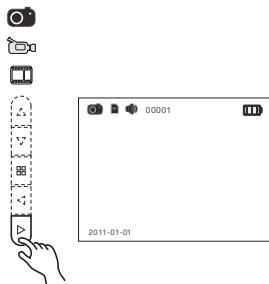


Start / stop videooptagelse

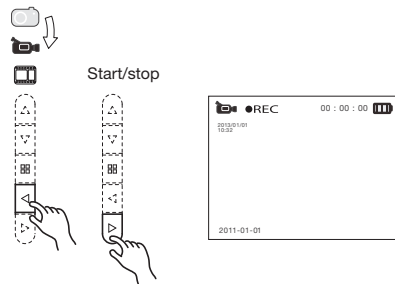


Se fotos

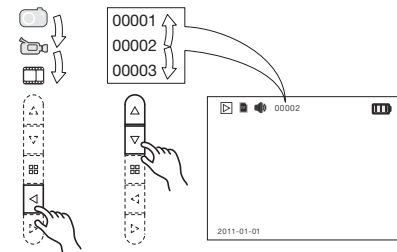

Afspil video

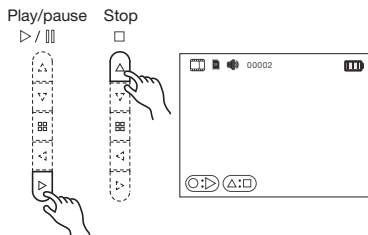


Slet foto / video

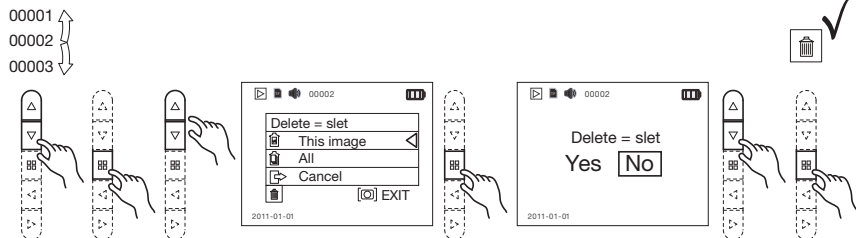


The world's favourite lock since 1843
www.yalelock.com



Basis opsætning

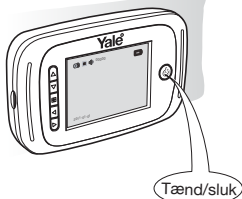

Skærmen

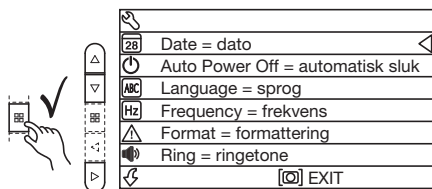

△	Date = dato	
▽	0n On = tænd	◀
	0ff Off = sluk	
	28 Set Date = indstil dato	
▶	↵ [OK] EXIT	
△	Auto Power Off = automatisk sluk	
▽	1 10s = 10 sekunder	
	2 20s = 20 sekunder	◀
	3 30s = 30 sekunder	
	Ⓞ Off = ikke automatisk sluk	
▶	↵ [OK] EXIT	
△	Language = sprog	
▽	ABC English	◀
	ABC Deutsch	
	ABC Espanol	
	ABC Francais	
	ABC Italiano	
	ABC Russian	
▶	↵ [OK] EXIT	
△	Frequency = frekvens	
▽	50 50Hz	◀
	60 60Hz	
▶	↵ [OK] EXIT	
△	Format = formattering	
▽	OK	
	Cancel = annullér	◀
▶	↵ [OK] EXIT	
△	Ring = ringetone	
▽	🔊 Ring Set = valg af ringetone	
	🔊 High = høj	
	🔊 Low = lav	◀
	🔊 Off = ingen ringetone	
▶	↵ [OK] EXIT	
△	Camera = kamera	
▽	On = tændt	◀
	Off = slukket	
▶	↵ [OK] EXIT	
△	Default Setting = standard indstilling	
▽	OK	◀
	Cancel = annullér	
▶	↵ [OK] EXIT	